


INSTRUCTION CARD

JURASSIC PARK

PRO / PREMIUM / LE

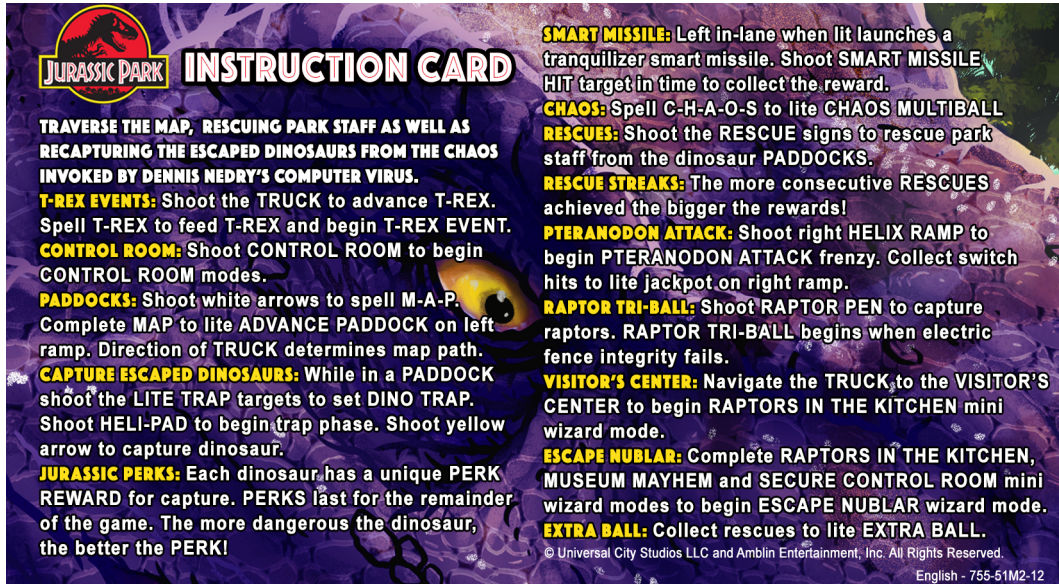

JURASSIC PARK INSTRUCTION CARD

TRAVERSE THE MAP, RESCUING PARK STAFF AS WELL AS RECAPTURING THE ESCAPED DINOSAURS FROM THE CHAOS INVOKED BY DENNIS NEDRY'S COMPUTER VIRUS.

T-REX EVENTS: Shoot the TRUCK to advance T-REX. Spell T-REX to feed T-REX and begin T-REX EVENT.

CONTROL ROOM: Shoot CONTROL ROOM to begin CONTROL ROOM modes.

PADDOCKS: Shoot white arrows to spell M-A-P. Complete MAP to lite ADVANCE PADDOCK on left ramp. Direction of TRUCK determines map path.

CAPTURE ESCAPED DINOSAURS: While in a PADDOCK shoot the LITE TRAP targets to set DINO TRAP. Shoot HELI-PAD to begin trap phase. Shoot yellow arrow to capture dinosaur.

JURASSIC PERKS: Each dinosaur has a unique PERK REWARD for capture. PERKS last for the remainder of the game. The more dangerous the dinosaur, the better the PERK!

SMART MISSILE: Left in-lane when lit launches a tranquilizer smart missile. Shoot SMART MISSILE HIT target in time to collect the reward.

CHAOS: Spell C-H-A-O-S to lite CHAOS MULTIBALL

RESCUES: Shoot the RESCUE signs to rescue park staff from the dinosaur PADDOCKS.

RESCUE STREAKS: The more consecutive RESCUES achieved the bigger the rewards!

PTERANODON ATTACK: Shoot right HELIX RAMP to begin PTERANODON ATTACK frenzy. Collect switch hits to lite jackpot on right ramp.

RAPTOR TRI-BALL: Shoot RAPTOR PEN to capture raptors. RAPTOR TRI-BALL begins when electric fence integrity fails.

VISITOR'S CENTER: Navigate the TRUCK to the VISITOR'S CENTER to begin RAPTORS IN THE KITCHEN mini wizard mode.

ESCAPE NUBLAR: Complete RAPTORS IN THE KITCHEN, MUSEUM MAYHEM and SECURE CONTROL ROOM mini wizard modes to begin ESCAPE NUBLAR wizard mode.

EXTRA BALL: Collect rescues to lite EXTRA BALL.

© Universal City Studios LLC and Amblin Entertainment, Inc. All Rights Reserved. English - 755-51M2-12

