

	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip A
	5 AMP	5 AMP	5 AMP	5 AMP	1/4 AMP	
	10 AMP	7 1/2 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip B
	7 1/2 AMP	7 1/2 AMP	5 AMP	5 AMP	1/4 AMP	
	7 1/2 AMP	7 1/2 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip C
	10 AMP	10 AMP	5 AMP	5 AMP	1/4 AMP	
	10 AMP	10 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip D
	10 AMP	7 1/2 AMP	5 AMP	5 AMP	1/4 AMP	
	10 AMP	7 1/2 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

SOUND BOARD FUSE	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip E
1 AMP	10 AMP	7 1/2 AMP	5 AMP	5 AMP	1/4 AMP	
SLO-BLO	10 AMP	7 1/2 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

SOUND BOARD FUSE	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip F
1 AMP	12 AMP	10 AMP	5 AMP	5 AMP	1/4 AMP	
SLO-BLO	12 AMP	10 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

SOUND BOARD FUSE	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip G
1 AMP	15 AMP	10 AMP	5 AMP	5 AMP	1/4 AMP	
SLO-BLO	15 AMP	10 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

SOUND BOARD FUSE	LIGHTBOX LAMP FUSE	PLAYBOARD LAMP FUSE	8V	25V	69V	Fuse Strip H
1 AMP	10 AMP	7 1/2 AMP	5 AMP	5 AMP	1/4 AMP	
SLO-BLO	10 AMP	7 1/2 AMP	SLO-BLO	SLO-BLO	SLO-BLO	

	SOUND BOARD FUSE 1 AMP SLO-BLO	LIGHTBOX LAMP FUSE 7½ AMP	PLAYBOARD LAMP FUSE 7½ AMP	8V 5 AMP SLO-BLO	25V 5 AMP SLO-BLO	69V ¼ AMP SLO-BLO	Fuse Strip I
--	--	---	--	---	--	--	---------------------

**PRIMARY FUSE
2½ AMP. SLO-BLO**

Line voltage 230V

**PRIMARY FUSE
5 AMP. SLO-BLO**

Line voltage 115V

**PRIMARY FUSE
5 AMP SLO-BLO/115 VAC
2.5 AMP SLO-BLO/230 VAC**

**PRIMARY FUSE
1 AMP. SLO-BLO**

Transformer fuse

LINE VOLTAGE

Outlet label

Used fonts: Futura Hv BT

Cards status:

Fuse strip A is used in Cleopatra, Sinbad

Fuse strip B is used in Joker Poker, Dragon

Fuse strip C is used in Close Encounters of the Third Kind, Solar Ride, Count Down, Pinball Pool

Fuse strip D is used in Charlie's Angels

Fuse strip E is used in Hulk

Fuse strip F is used in Totem, Genie

Fuse strip G is used in Buck Rogers, Roller Disco

Fuse strip H is used in Torch

Fuse strip I is used in Asteroid Annie

If you have any other information about these labels, please send a readable picture or scan to me.

Enjoy and have fun,

Peter

www.inkochnito.nl

If you like my work, please send me a donation via PayPal.