

ELVIS® PLAYFIELD SHOT MAP


OBJECTIVE : Get to *Graceland* by lighting the following:

• **FEATURED HITS COMPLETED** (start all 5 Song Modes), **GIFTS FROM ELVIS COMPLETED** and **TOP TEN COUNTDOWN COMPLETED**.

Song Mode 2.

Blue Suede Shoes (Shoot **CENTER LOOP** with Upper Right Flipper)

BLUE SUEDE SHOES

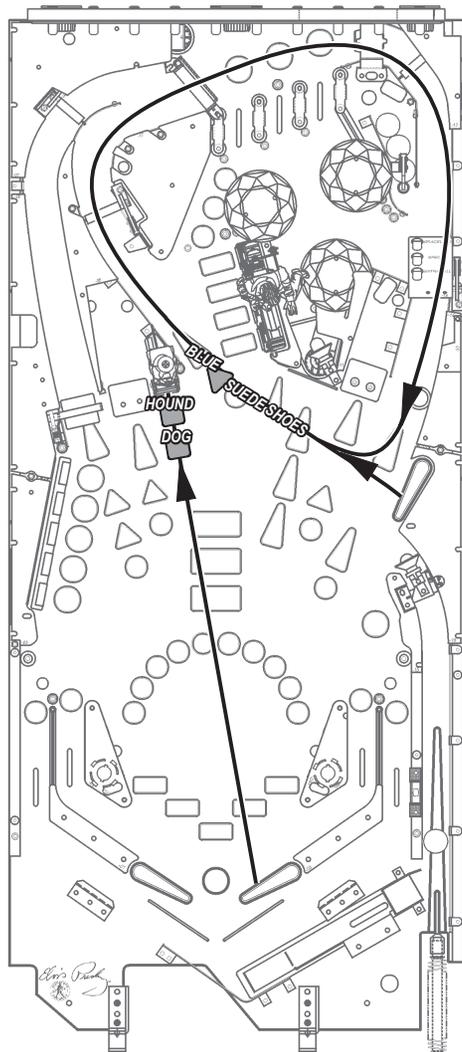


HOUND DOG
Song Mode 1.
 Hound Dog
 (Shoot **HOUND DOG** Target)

Song Mode 3.

Heartbreak Hotel (Shoot balls into **HEARTBREAK HOTEL** on Upper Playfield)


Shoot lit s to advance **TOP 10 COUNT-DOWN** and complete..

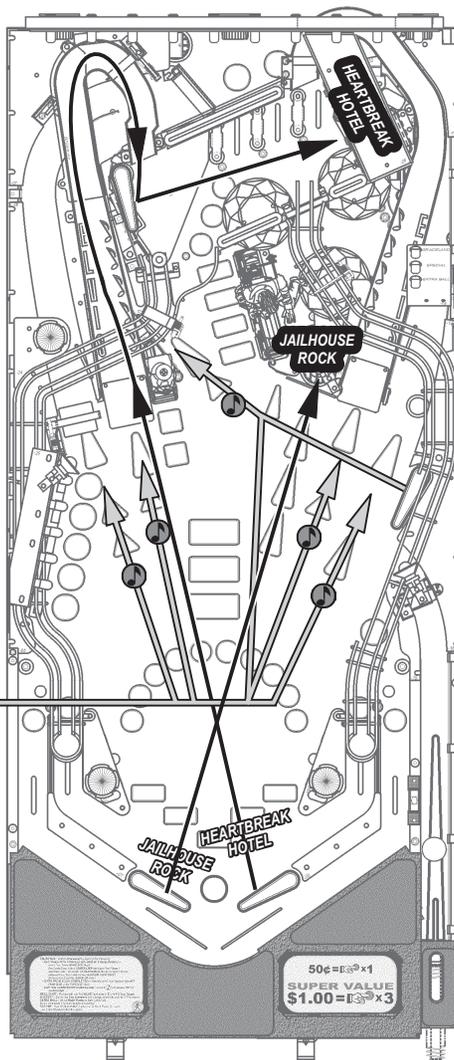

Song Mode 4.
 Jailhouse Rock (Shoot balls into the **JAILHOUSE EJECT HOLE**)

SHOOK
Song Mode 5.
 All Shook Up
 (Shoot **ALL-SHOOK-UP** shots)


Shoot **E-L-V-I-S**
 Drop
 Targets
to light **GIFT FROM ELVIS** on the **TOP EJECT HOLE**.

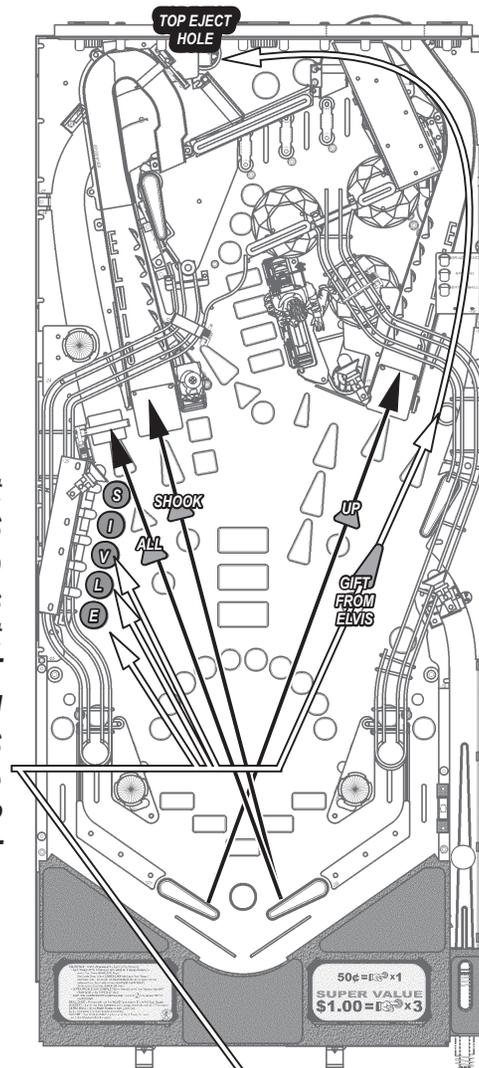

GIFT FROM ELVIS
 To complete **GIFT FROM ELVIS**, when lit, shoot **Top Eject Hole**.


ELVIS® PLAYFIELD SHOT MAP CONTINUED

MYSTERY : Ball in the **Pop Bumpers** will change channels until all 3 TVs match. Watch the animated Dot Display!

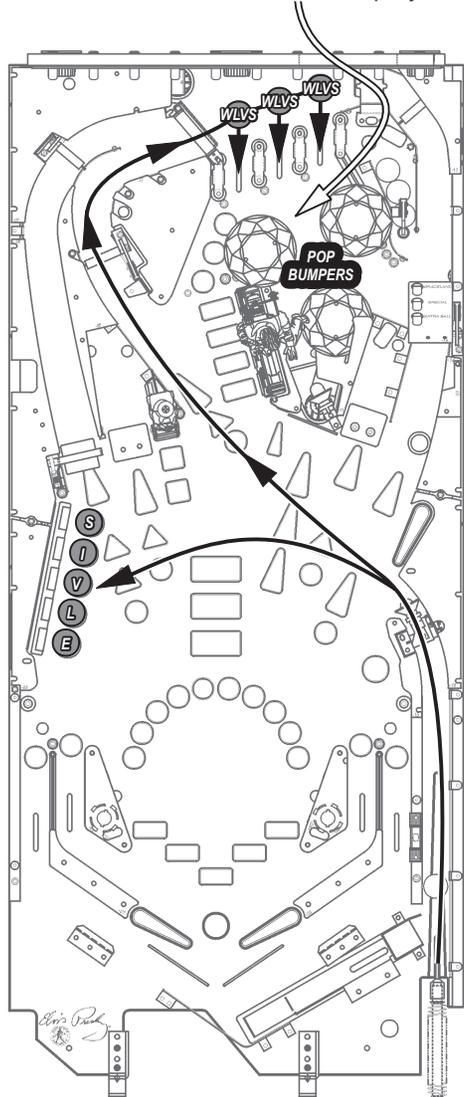

SKILL SHOT :  Plunge ball into the **WLVS Top Lanes** or **E-L-V-I-S** Drop Targets. 


EXTRA BALL : There are three (3) places that may light **EXTRA BALL: Pop Bumpers** **Right Ramp Shot** or **Completing Drop Targets**

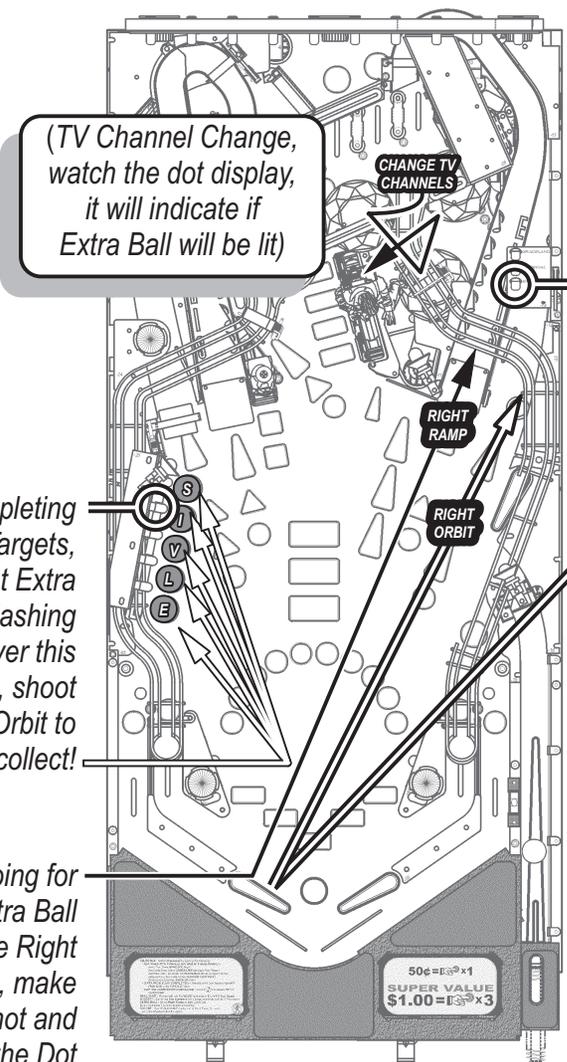


After completing the Drop Targets, if "Light Extra Ball", is flashing (on sign over this wire ramp), shoot the Right Orbit to collect!

If going for the Extra Ball via the Right Ramp, make your shot and watch the Dot Display!

ENCORE : Spell **E-N-C-O-R-E** (letters lit in Back Panel) to earn an **Extra Multiball** after the game.

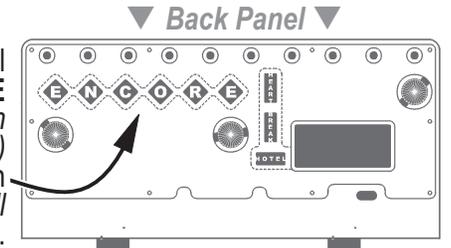

To collect the **EXTRA BALL**, when **LIT-UP**, shoot the Right Orbit (under the sign with the Extra Ball lit-up).

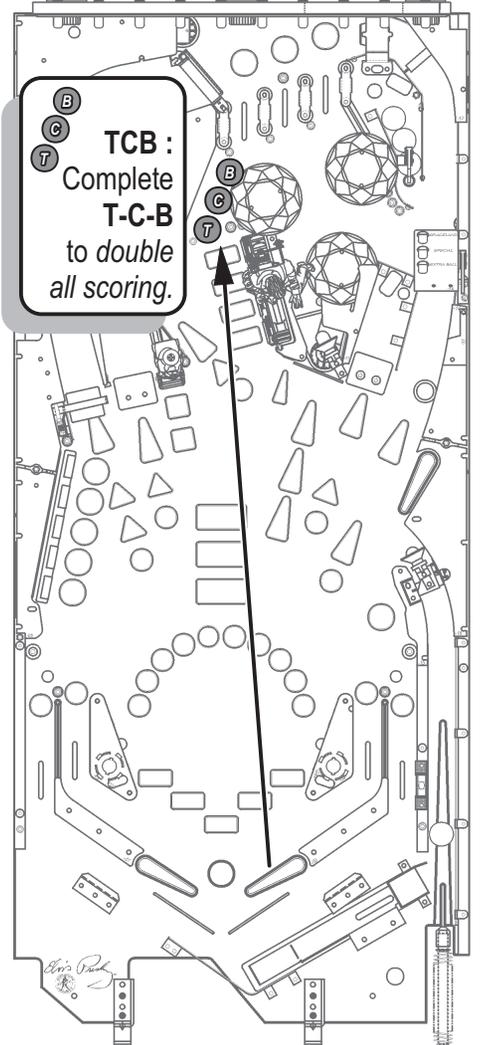

TCB : Complete **T-C-B** to double all scoring.