

SELF-TEST

BUTTON LOCATED INSIDE OF COIN DOOR

NO. OF TIMES PUSHED		
1	BURN IN	All outputs tested.
2	LAMPS	All feature lamps will flash on & off.
3	DISPLAY	All digits display 000000 thru 999999 then No. 8 shifts from left to right.
4	SOLENOIDS	Continuous sequence of solenoids pulsed, then all sounds pulsed. (Solenoid driver transistor "Q" number displayed as solenoid is pulsed.
5	SWITCHES (Flashing 0 if all switches open)	Switch I.D. No. displays if closed (See chart for switch I.D. No.)
6 To 23	THRESHOLD & BOOKKEEPING	See Operating Manual.

CREDITS/COIN ADJUSTMENTS:

The credits given are selectable by means of MPU switches. Sixteen credits ratios available. The MPU switch settings and resultant credits/coin are as follows:

CREDITS/COIN ADJUSTMENTS SWITCHES

SWITCH NO. 1 (BLU) LEFT	4	3	2	1		
SWITCH NO. 2 (BRN-WHITE) CENTER	12	11	10	9		
SWITCH NO. 3 (RED-WHITE) RIGHT	28	27	26	25	CREDITS	COIN
OFF	OFF	OFF	OFF	OFF	1	} Per 1
OFF	OFF	OFF	ON	OFF	2	
OFF	OFF	ON	OFF	OFF	3	
OFF	OFF	ON	ON	OFF	4	
OFF	ON	OFF	OFF	OFF	5	
OFF	ON	OFF	ON	OFF	6	
OFF	ON	ON	OFF	OFF	7	
OFF	ON	ON	ON	OFF	10	
ON	OFF	OFF	OFF	OFF	14	

				CREDITS	COINS	SEQUENCE OF CREDITS PER COIN			
						1	2	3	4
ON	OFF	OFF	ON 1	2	0 1		
ON	OFF	ON	OFF 3	2	1 2		
ON	OFF	ON	ON 5	2	0 5		
ON	ON	OFF	OFF 7	2	0 7		
ON	ON	OFF	ON 3	4	0 1	0	2
ON	ON	ON	OFF 5	4	1 1	1	2
ON	ON	ON	ON 7	4	1 2	1	3

If two of three coin chutes are adjusted the same for multiple coins, credits will increase as if dropped in same chute.

Credit sequence will reset when:

- 1) credit button is pressed
- 2) any points are scored

Font used: Helvetica
Freefall Self Test and Bookkeeping card confirmed.

Enjoy and have fun,
Peter

www.inkochnito.nl

If you like my work, please send me a donation via PayPal.