

SELF-TEST

BUTTON LOCATED INSIDE OF COIN DOOR

NO. OF TIMES PUSHED		
1	BURN IN	All outputs tested.
2	LAMPS	All feature lamps will flash on & off.
3	DISPLAY	All digits display 000000 thru 999999 then No. 8 shifts from left to right.
4	SOLENOIDS	Continuous sequence of solenoids pulsed, then all sounds pulsed. (Solenoid driver transistor "Q" number displayed as solenoid is pulsed.
5	SWITCHES (Flashing 0 if all switches open)	Switch I.D. No. displays if closed (See chart for switch I.D. No.)
6 To 23	THRESHOLD & BOOKKEEPING	See Operating Manual.

12C-264-12

CREDITS/COIN ADJUSTMENTS:

The credits given are selectable by means of MPU switches. Sixteen credits ratios available. The MPU switch settings and resultant credits/coin are as follows:

CREDITS/COIN ADJUSTMENTS SWITCHES

SWITCH NO. 1 (BLU) LEFT	4	3	2	1		
SWITCH NO. 2 (BRN-WHITE) CENTER	12	11	10	9		
SWITCH NO. 3 (RED-WHITE) RIGHT	28	27	26	25	CREDITS	COIN
OFF	OFF	OFF	OFF	OFF 1	} Per 1
OFF	OFF	OFF	ON	OFF 2	
OFF	OFF	ON	OFF	OFF 3	
OFF	OFF	ON	ON	OFF 4	
OFF	ON	OFF	OFF	OFF 5	
OFF	ON	OFF	ON	OFF 6	
OFF	ON	ON	OFF	OFF 7	
OFF	ON	ON	ON	OFF 10	
ON	OFF	OFF	OFF	OFF 14	

					CREDITS	COINS	SEQUENCE OF CREDITS PER COIN			
							1	2	3	4
ON	OFF	OFF	ON	1	2	0 1
ON	OFF	ON	OFF	3	2	1 2
ON	OFF	ON	ON	5	2	0 5
ON	ON	OFF	OFF	7	2	0 7
ON	ON	OFF	ON	3	4	0 1
ON	ON	ON	OFF	5	4	1 1
ON	ON	ON	ON	7	4	1 2
							4	1 2
							1	2 1
							1	2 3

If two of three coin chutes are adjusted the same for multiple coins, credits will increase as if dropped in same chute.

Credit sequence will reset when:

- 1) credit button is pressed
- 2) any points are scored

Font used: Helvetica
Freefall Self Test and Bookkeeping card confirmed.

Enjoy and have fun,
Peter

www.inkochnito.nl

If you like my work, please send me a donation via PayPal.