


ASSEMBLY INSTRUCTIONS

FEED REQUIRED AMOUNT OF LINE CORD THRU SLOT IN PEDESTAL. MOUNT THE LIGHTBOX ON TOP OF PEDESTAL WITH MACHINE SCREWS AND WASHERS PROVIDED.

REMOVE THE SHIPPING SCREW HOLDING PLUG MOUNTING PANEL.

INSTALL PLUGS IN SOCKETS ON PANEL.

HANG PANEL WITH PLUG AND SOCKETS INTO PEDESTAL HOLE. THIS WILL ALLOW THE LIGHTBOX INSERT TO BE LOWERED FOR SERVICING.

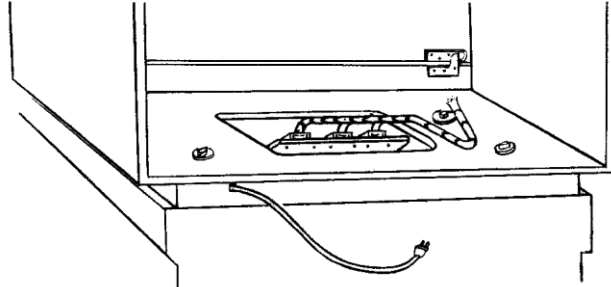

222

A-9487-1


ASSEMBLY INSTRUCTIONS

FEED REQUIRED AMOUNT OF LINE CORD THRU SLOT IN PEDESTAL. MOUNT THE LIGHTBOX ON TOP OF PEDESTAL WITH MACHINE SCREWS AND WASHERS PROVIDED.

REMOVE THE SHIPPING SCREW HOLDING PLUG MOUNTING PANEL.

INSTALL PLUGS IN SOCKETS ON PANEL.

HANG PANEL WITH PLUG AND SOCKETS INTO PEDESTAL HOLE. THIS WILL ALLOW THE LIGHTBOX INSERT TO BE LOWERED FOR SERVICING.

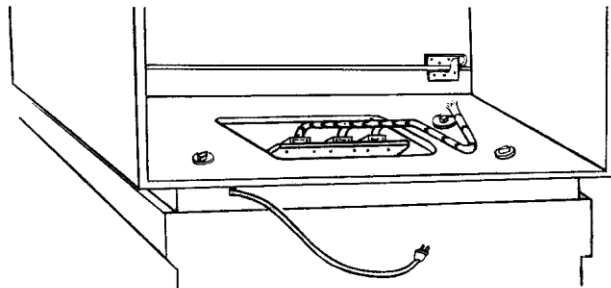

222

A-9487-1

Used fonts: Futura Md BT
Card size: 102x76mm.

Cards status:

A-9487-1 Assembly Instructions card confirmed.

If you have any other information about these cards, please send a readable picture or scan to me.

Enjoy and have fun,
Peter

www.inkochnito.nl

If you like my work ,please send me a donation via PayPal.