


INSTRUCTION FOR USE OF BILL ACCEPTOR/UPSTACKER OPTION

MOUNTING A BILL ACCEPTOR

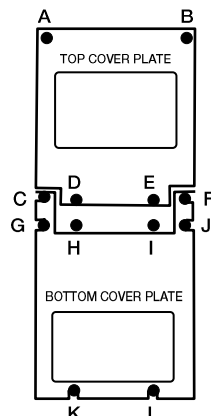


1. REMOVE AND RETAIN HEX NUTS A, B; SCREWS C, D, E, F, H, I, J, AND PLASTIS SPACERS ON C, F.
2. REMOVE TOP COVER PLATE.
3. PUT THE PLASTIC SPACERS FROM C, F ONTO H, I. (KEEP THEM FOR IN CASE USING AN UPSTACKER)
4. MOUNT BILL ACCEPTOR OVER STUDS A, B.
5. SECURE USING HEX NUTS A, B AND SCREWS H, I.

MOUNTING AN UPSTACKER

1. REMOVE AND RETAIN SCREWS C, F, G, H, I, J; HEX NUTS K, L; AND SPACERS ON K, L.
2. REMOVE BOTTOM COVER PLATE.
3. PUT THE PLASTIC SPACER ONTO K, L AS IT WAS.
4. MOUNT UPSTACKER OVER STUDS K, L.
5. PLACE GROUND WIRE COMING FROM THE UPSTACKER UNIT ON STUD L.
6. SECURE USING SCREWS C, F AND HEX NUTS K, L.

INSTRUCTION FOR USE OF BILL ACCEPTOR/UPSTACKER OPTION

MOUNTING A BILL ACCEPTOR

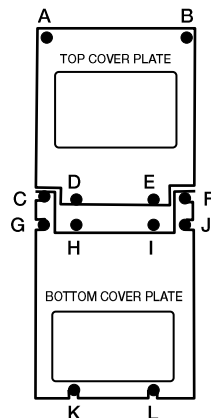

1. REMOVE AND RETAIN HEX NUTS A, B; SCREWS C, D, E, F, H, I, J, AND PLASTIS SPACERS ON C, F.
2. REMOVE TOP COVER PLATE.
3. PUT THE PLASTIC SPACERS FROM C, F ONTO H, I. (KEEP THEM FOR IN CASE USING AN UPSTACKER)
4. MOUNT BILL ACCEPTOR OVER STUDS A, B.
5. SECURE USING HEX NUTS A, B AND SCREWS H, I.

MOUNTING AN UPSTACKER

1. REMOVE AND RETAIN SCREWS C, F, G, H, I, J; HEX NUTS K, L; AND SPACERS ON K, L.
2. REMOVE BOTTOM COVER PLATE.
3. PUT THE PLASTIC SPACER ONTO K, L AS IT WAS.
4. MOUNT UPSTACKER OVER STUDS K, L.
5. PLACE GROUND WIRE COMING FROM THE UPSTACKER UNIT ON STUD L.
6. SECURE USING SCREWS C, F AND HEX NUTS K, L.

Used fonts: HelveticaNeueLT Std Med, HelveticaNeueLT Std Med Cn
Card size: 82.5x92mm.

Enjoy and have fun,
Peter

www.inkochnito.nl

If you like my work, please send me a donation via PayPal.